

# Floors are Cleaner Quicker with CentraMop

*Vacuum loose debris AND mop up sticky dust and spots.*

## Important Safety Instructions

Read all instructions before using your CentraMop vacuum attachment.

WARNING-TO reduce the risk of fire, electrical shock or injury:

Disconnect power units electrical plug before servicing any vacuum.

Do not use outdoors or on wet surfaces. Only the Microfiber pad may be damp.

Do not allow to be used as a toy. Close attention is necessary when used by or near children.

Use only as described in this manual. Use only manufacturer's recommended attachments.

Do not handle hose, outlets, or unit with wet hands.

Keep hair, loose clothing, fingers, and all parts of the body away from the openings and moving parts.

Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

Use extra care when cleaning on stairs.

Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present

**WARNING: Do not use CentraMop for water pick up.  
Electric shock may occur.**

## Using the CentraMop

### Quick Damp Mopping

- Rinse microfiber pad in warm water and wring out thoroughly.
- For large areas, rinse and wring out every 500 sq.ft. or as needed.

### Regular Cleaning

- Either rinse the microfiber pad in warm water or apply a tile/laminate/wood floor cleaner available on the market. We recommend Woodpecker brand for laminate and wood. Avoid damage, **check with your flooring manufacturer before using any cleaning solutions.**
- Spray the cleaner directly onto the pad to dampen and reapply as needed.

## Cleaning the CentraMop

### Removing the Microfiber Pad

- Velcro holds the pad in place. Simply pull the pad off starting from one end.

### Cleaning the Microfiber Pad:

- Machine washable.
- Do not use fabric softeners, dryer sheets or bleach when washing pad as this eliminates the electrostatic charge for dust pick-up when dry or wet.
- For quick washing, place in warm water with laundry detergent for 5 minutes. Rinse pad thoroughly, wring out, and hang to dry.

### Replacing the Microfiber Pad

- Position one end of the pad on the side Velcro. As the pad is laid down on the bottom side, move the pad to keep it centered. If the pad is unevenly fitted across the brush, it can be removed and reset.